


# Door & Door Frame Protection

## KOROSEAL Wall Protection Systems Korogard® F360 Door Frame Guard

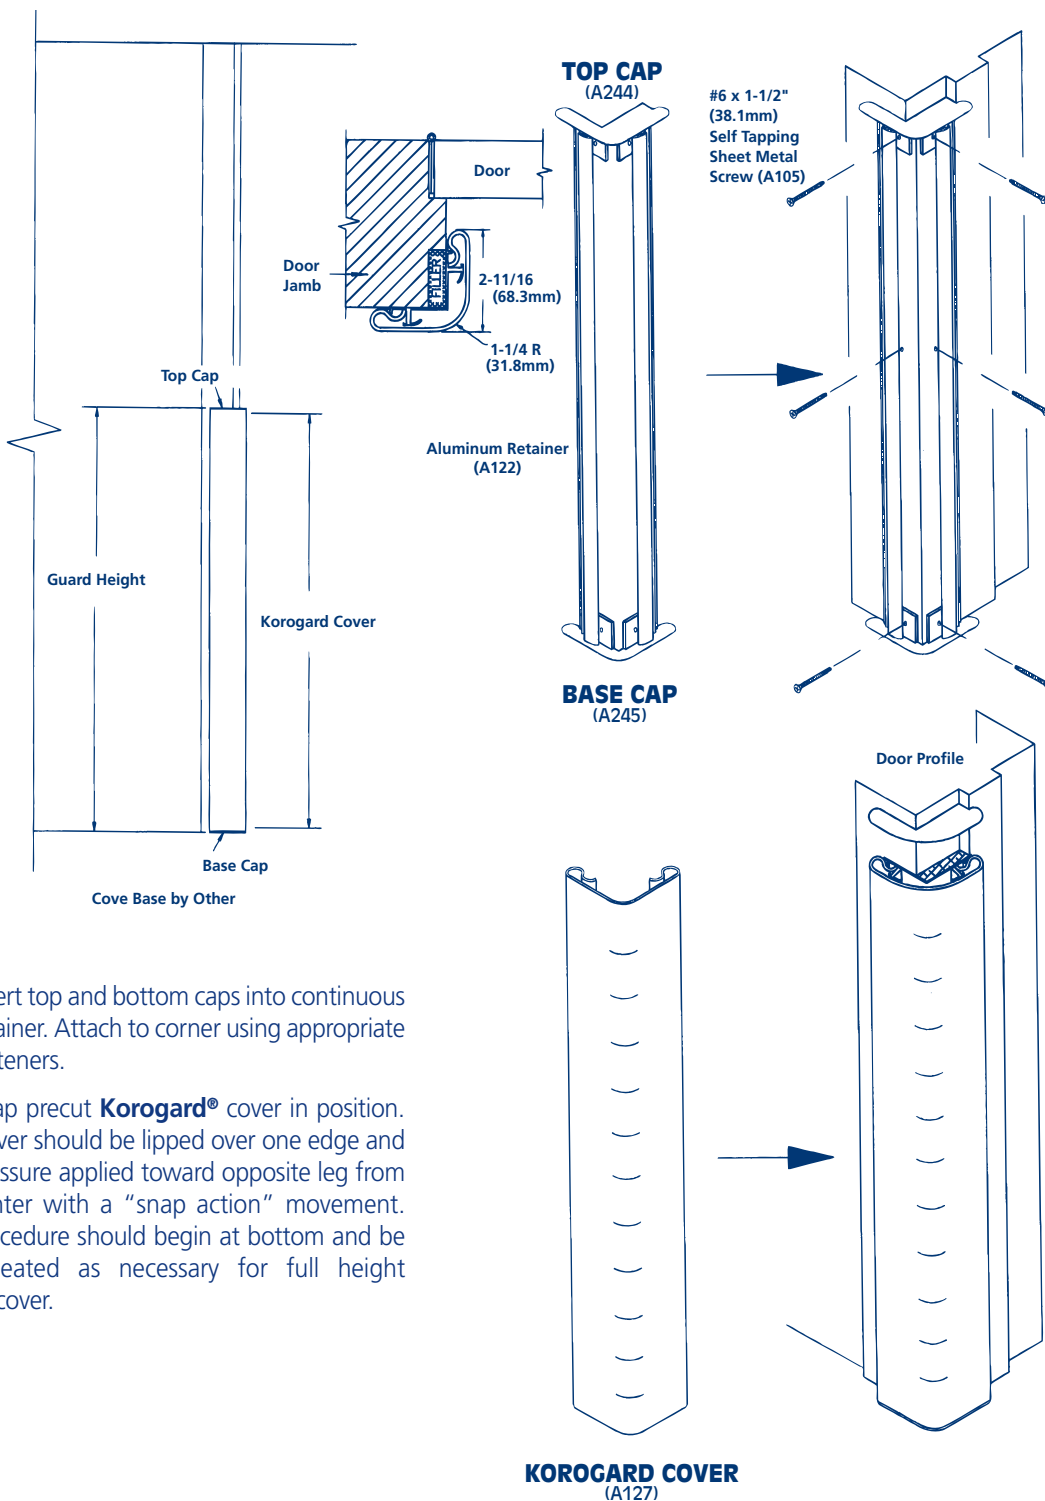

1. Insert top and bottom caps into continuous retainer. Attach to corner using appropriate fasteners.
2. Snap precut **Korogard®** cover in position. Cover should be lipped over one edge and pressure applied toward opposite leg from center with a "snap action" movement. Procedure should begin at bottom and be repeated as necessary for full height of cover.

