

Handrails

KOROSEAL Wall Protection Systems Korogard® HS7S Handrail


Recommended Installer Qualifications: Only those parties experienced in working with finished metal rail products should engage in installing **Korogard®** handrails

Recommended Installation Equipment: Tape Measure, Level, Chalk Line, Drill, Drill Bits, Screw Driver, Removable Marker, Cleaning Cloth, and Suitable Mounting Fasteners (not included).


1. **Korogard** handrails are supplied in factory-fabricated sections per provided cut-list. Each supplied section is marked with a unique identifier in accordance with the identifier assigned per the cut-list. A copy of this cut-list is included with the product shipment for reference.
2. In accordance with architectural drawings and specifications, locate and install **Korogard** handrail sections per cut-list-coordinated and referenced floor-plan handrail location drawing. When required and supplied, **Korogard** shop drawings should be used accordingly.
3. Lay out work to be completed, including all component parts, along base of substrate (wall). Check material for any damage that may have occurred during shipment and/or handling at job site.
4. Snap chalk line at proper location on substrate to ensure level installation. Chalk line should be calculated to center line of wall fasteners.
Note: Chalk line will be visible after installation and must be removed at cleanup.
5. Determine lengths of rail section and applicable wall surface. Locate rail section right-to-left in accordance with these dimensions and related installation drawings and specifications. Ensure that rail section is identified and dimensioned correctly. Reference-mark chalk centerline appropriately.
6. Korogard handrail sections are supplied pre-drilled for anchoring to wall. If necessary, temporarily hand-place rail section into proper position on wall. Transfer and mark anchor hole locations on chalk centerline.
Note: Rail must be anchored to wall framing structure. Ensure that anchor location coincides with provided horizontal wall structure blocking/back-up.
7. Drill appropriately sized holes through wall surface into the structural framing using proper bit size for selected fasteners.
8. Mount provided "L" clip to wall using proper fasteners (supplied by installer). Tighten securely. Where splices occur insert coupler, butt rail together and tightly secure with #8-32 stainless steel set screws.
9. Mount rail assembly to wall using proper fasteners (supplied by installer). Tighten securely.
Note: Ensure all fasteners are secured and properly seated.
10. Clean Handrail using water-moistened cloth.
11. If you have any questions during installation, please contact your local **Korogard** representative.

Handrails

KOROSEAL Wall Protection Systems Korogard® HS7S Handrail

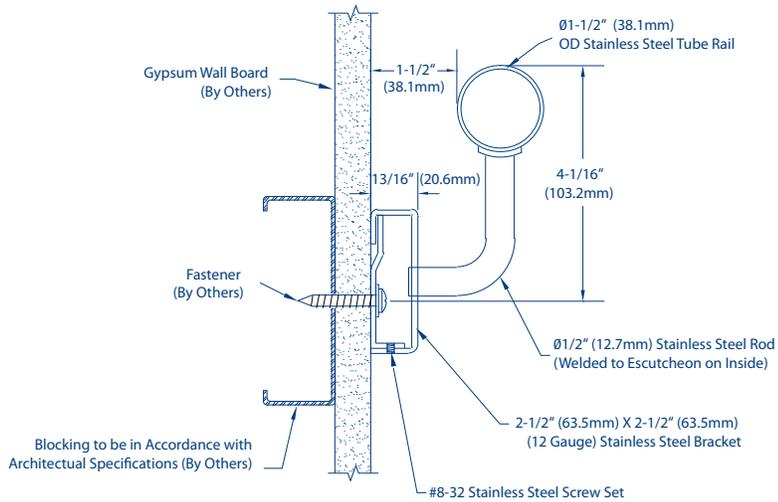

**Model HS7S
(Square Bracket)**

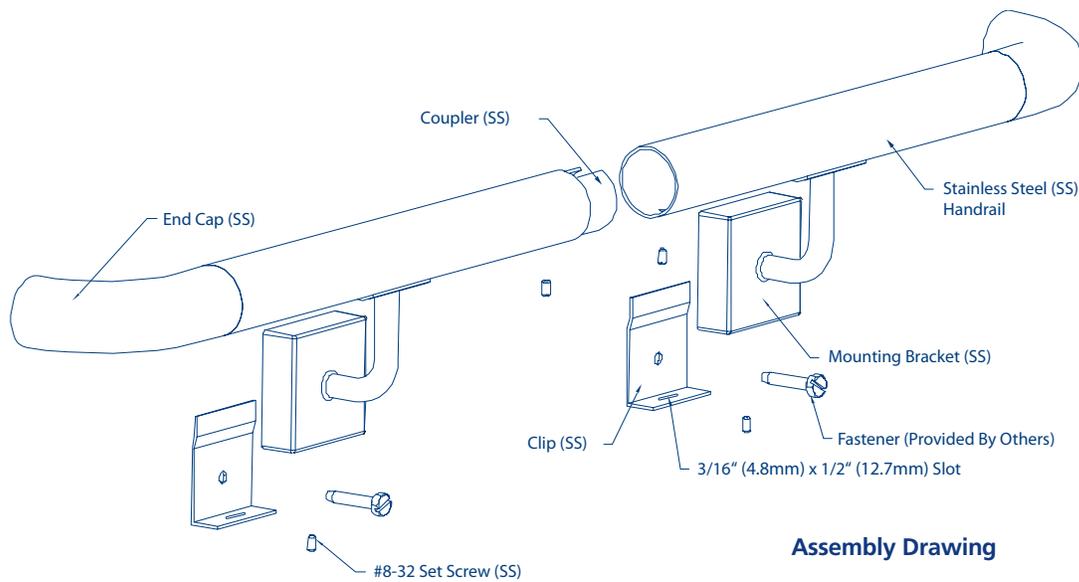

Assembly Drawing

