


# J-CAP INSTALLATION INSTRUCTIONS

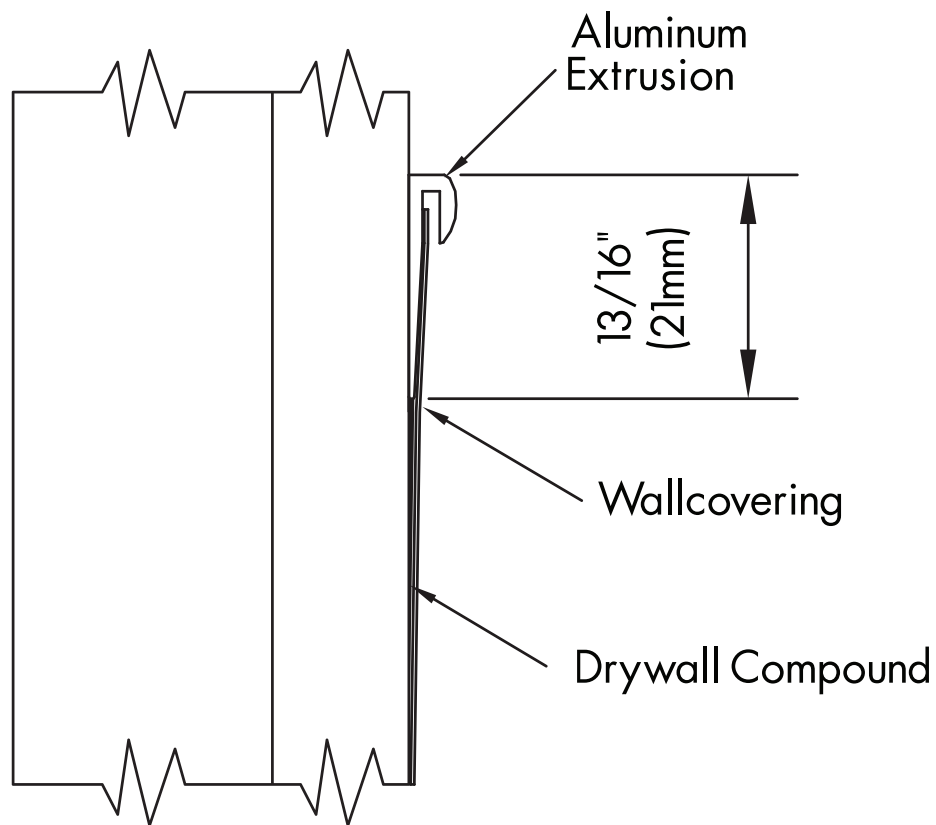

Mechanically fasten with self-tapping drywall screws and/or adhere aluminum extrusion with construction adhesive or contact cement.